

AQUA TILE - FOR TILE ROOF

- 1 Ensure tiles are cleaned before installing the Aqua Tile to ensure the butyl adhesive can have maximum effect when bonded to the tiles.
- 2 Cut the rubber cone at least **15mm smaller** than the bracket/ anchor's outside diameter with a sharp knife or scissors. Ensure there are no accidental nicks in the polymer, as this will continue to split/tear over time.


Tip: Ensure the blades are sharp with no contamination e.g. glue or any accumulated dirt.
- 3 Halfway peel back the lining from the underside of the Aqua Tile, so that the bracket/ anchor is given access to the rubber boot.
- 4 Lubricate bracket/ anchor with water and slide the Aqua Tile on.
- 5 Form an anti-capillary fold at the top of the base sheet.
- 6 Remove the remaining protective backing from the underside of the Aqua Tile, that is covering the butyl adhesive.
- 7 Hand form the base all around the tile and apply pressure to the Aqua Tile base, so that the full butyl adhesive sticks to the tiles.

ENSURE TILES ARE CLEANED BEFORE INSTALLING THE AQUA TILE FLASHING TO ENSURE THE BUTYL ADHESIVE CAN HAVE MAXIMUM EFFECT WHEN BONDED TO THE TILES

CUT THE RUBBER CONE AT LEAST 15MM SMALLER THAN PIPE O.D. WITH A SHARP KNIFE OR SCISSORS




HALFWAY PEEL BACK THE LINING FROM THE UNDERSIDE OF THE AQUA TILE, SO THAT PIPE IS GIVEN ACCESS TO THE RUBBER BOOT

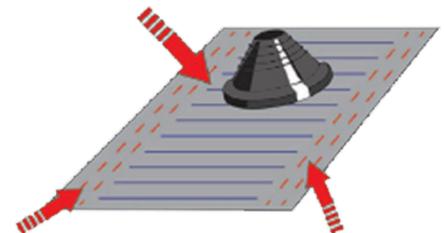


FULL BUTYL ADHESIVE ON THE UNDERSIDE OF FLASHING

LUBRICATE PIPE WITH WATER AND SLIDE THE FLASHING DOWN THE PIPE

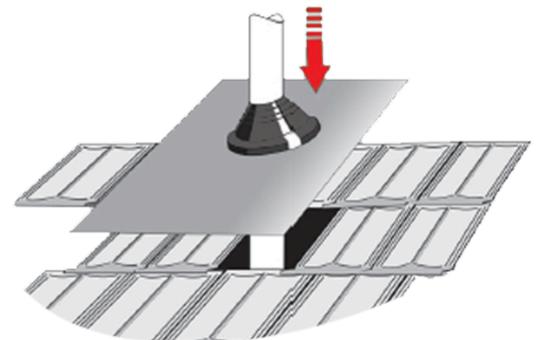

FORM AN ANTI-CAPILLARY FOLD AT TOP OF BASE SHEET

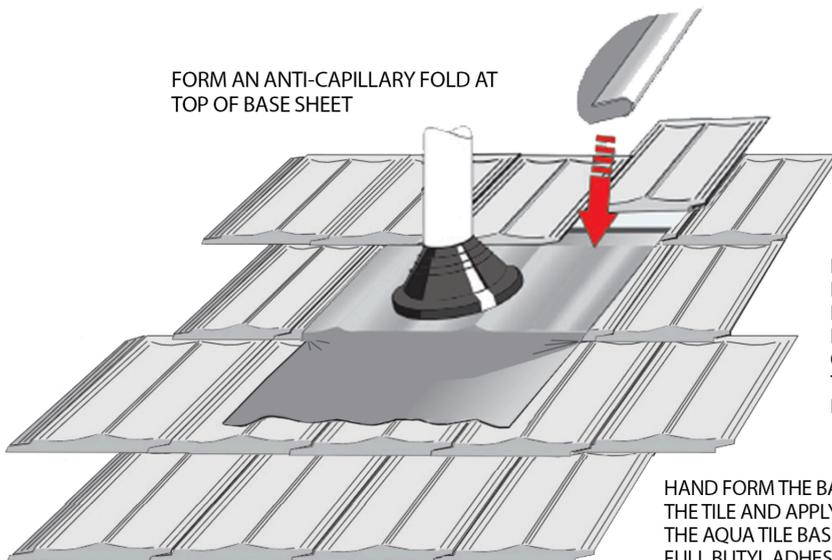

REMOVE THE REMAINING PROTECTIVE BACKING FROM THE UNDERSIDE OF THE AQUA TILE THAT IS COVERING THE BUTYL ADHESIVE

HAND FORM THE BASE ALL AROUND THE TILE AND APPLY PRESSURE TO THE AQUA TILE BASE, SO THAT THE FULL BUTYL ADHESIVE STICKS TO THE TILES