



Factory 13/5 Speedwell St

Somerville VIC 3912

☎ 03 5978 8755

☎ 1800 001 018

www.RoofExtenda.com.au

## S500 INSTALLATION GUIDE FOR TIN ROOF


### GENERAL INSTALLATION

- 1 Lift roof sheet to achieve an opening to fit the Roof Extenda Bracket.
- 2 Bolt angle bracket with the threaded rod & backing plate to the selected rafter with **4x M12 Hex Bolts**. Secure the bracket & backing plate to the wall top plate with **4x M10 Coach Screws** through the lower bottom holes.
- 3 Replace roof sheet, cutting a hole to allow the threaded rod to penetrate the roof.
- 4 Ensure you seal the centre hole in the top bracket prior to attaching pergola or carport beam, for further weather proofing.
- 5 Secure top bracket with **4x M12 Hex Bolts** and **50mm Square Washers**.



### CARE INSTRUCTIONS

Roof Extenda recommends painting or powder coating Mild Steel Brackets before installation for additional corrosion protection. Brackets to be cleaned and inspected yearly and re-coated if required.

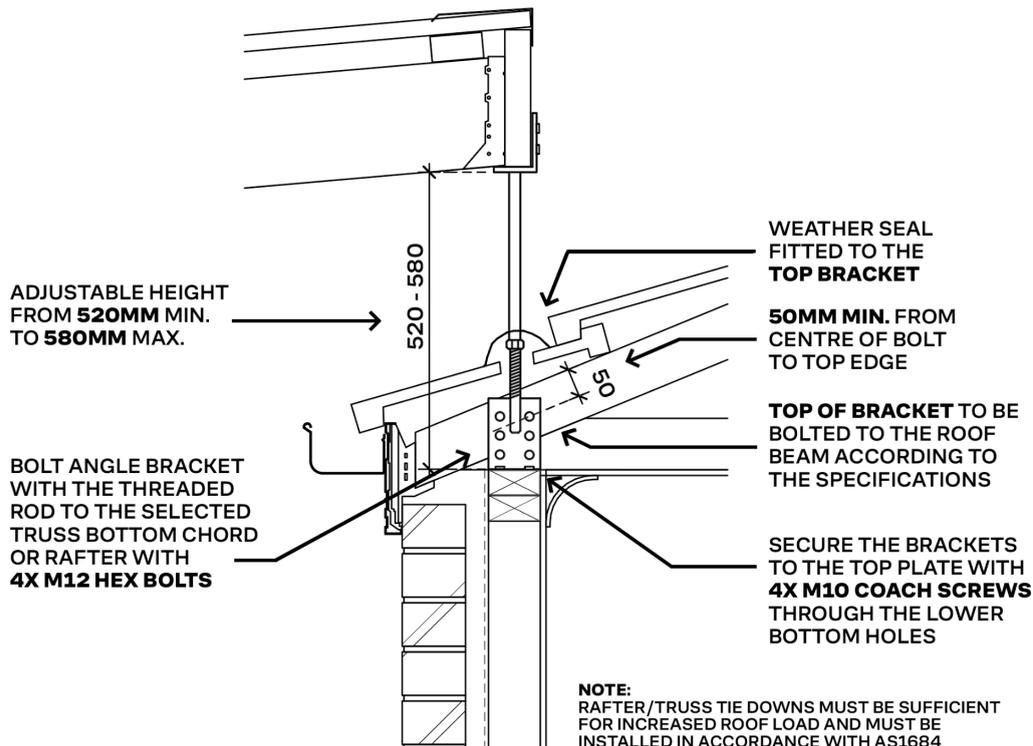

## THE S500 BRACKET

ADJUSTABLE HEIGHT FROM 520MM TO 580MM

### NOTE


Local Council or Shire approval may be required prior to construction. Engineer's computations related to Roof Extenda products are available on the website. Roof Extenda accepts no responsibility for the type of construction undertaken. If located in a highly corrosive area, Roof Extenda recommends **316 Marine Grade Stainless Steel Brackets**.

## S-SERIES FLASHRITE WEATHER SEAL INSTALLATION

- 1 Lift roof sheet to achieve an opening to fit the Roof Extenda Bracket.
- 2 Bolt the angle bracket with the threaded rod & backing plate to the selected rafter with **4x M12 Hex Bolts**. Secure the bracket & backing plate to the wall top plate with **4x M10 Coach Screws** through the lower bottom holes.
- 3 Replace the roof sheet, cutting a hole to allow the threaded rod to penetrate the roof.
- 4 Cut cone to the exact corresponding bracket outside diameter. We recommend a sharp pair of scissors to cut our weather seal for the correct bracket size. Ensure there are no accidental nicks in the polymer, as this will continue to split/tear over time.
 

**Tip: Ensure the blades are sharp with no contamination e.g. glue or any accumulated dirt.**
- 5 Lubricate the top bracket with water prior to attaching the weather seal.
- 6 Attach the weather seal to the top bracket then wind the top bracket down to the desired height and lock the hex nut tightly.
- 7 Form the weather seal to the profile of the roof and mark out the position of the weather seal.
- 8 Slide the weather seal up the bracket to apply neutral cure sealant inside the area marked, press the weather seal into position and finish with a bead of sealant to the edges of the weather seal to complete the fitting.
- 9 Realign weather seal onto roof and fix with **12x Class 4 Hex Head Self-Drilling Screws** minimum of **16mm long** with a rubber washer.
- 10 Ensure to seal the centre hole in the top bracket prior to attaching the pergola/ carport beam.
- 11 Secure top bracket with **4x M12 Hex Bolts** and **50mm Square Washers**.


CUT CONE TO EXACT  
CORRESPONDING BRACKET  
PIPE DIAMETER

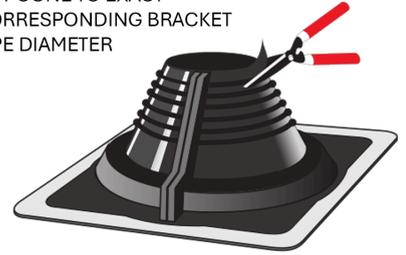

WHEN SLIDING FLASHING  
DOWN TOP BRACKET PIPE  
WITH WATER


FORM TO  
ROOF PROFILE

MARK OUT  
SEALANT PATHS

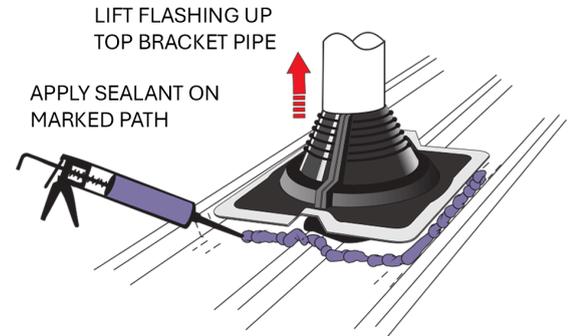

LIFT FLASHING UP  
TOP BRACKET PIPE


APPLY SEALANT ON  
MARKED PATH

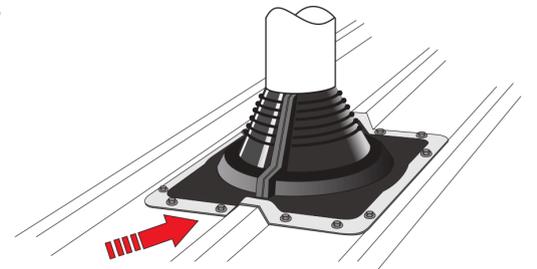

REALIGN FLASHING ONTO ROOF AND FIX  
WITH APPROPRIATE FASTENERS. START HERE.

## IF RETRO-FITTING A WEATHER SEAL:

SPLIT SHOULDERS  
WITH SCISSORS

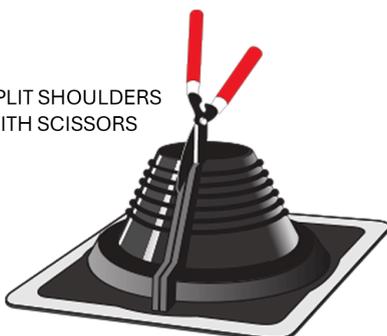

CRIMP FLASHING  
SHOULDERS WITH  
RETROFIT CLIPS.  
FACE JOINT DOWNSTREAM.

