



Factory 13/5 Speedwell St

Somerville VIC 3912

☎ 03 5978 8755

☎ 1800 001 018

www.RoofExtenda.com.au

S600 INSTALLATION GUIDE FOR TILE ROOF


GENERAL INSTALLATION

- 1 Remove roofing tiles to achieve an opening to fit the Roof Extenda Bracket.
- 2 Bolt angle bracket with the threaded rod & backing plate to the selected rafter with **4x M12 Hex Bolts**. Secure the bracket & backing plate to the wall top plate with **4x M10 Coach Screws** through the lower bottom holes.
- 3 Replace roof tiles, cutting a hole to allow the threaded rod to penetrate the roof.
- 4 Ensure you seal the centre hole in the top bracket prior to attaching pergola or carport beam, for further weather proofing.
- 5 Secure top bracket with **4x M12 Hex Bolts** and **50mm Square Washers**.



CARE INSTRUCTIONS

Roof Extenda recommends painting or powder coating Mild Steel Brackets before installation for additional corrosion protection. Brackets to be cleaned and inspected yearly and re-coated if required.

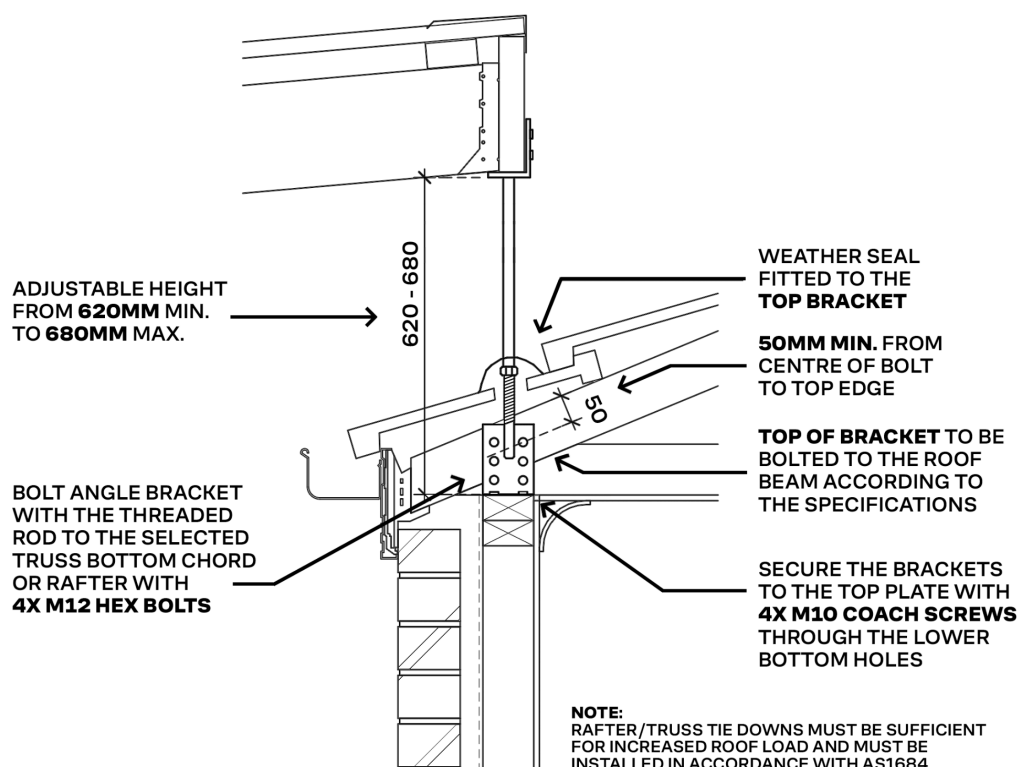

THE S600 BRACKET


ADJUSTABLE HEIGHT FROM 620MM TO 680MM

NOTE

Local Council or Shire approval may be required prior to construction. Engineer's computations related to Roof Extenda products are available on the website. Roof Extenda accepts no responsibility for the type of construction undertaken. If located in a highly corrosive area, Roof Extenda recommends **316 Marine Grade Stainless Steel Brackets**.

S-SERIES FLEXATILE INSTALLATION

- 1 Remove roofing tiles to achieve an opening to fit the S-Series Bracket.
- 2 Bolt the angle bracket with the threaded rod and backing plate to the selected rafter with **4x M12 Hex Bolts**. Secure the bracket and backing plate to the wall top plate with **4x M10 Coach Screws** through the lower bottom holes.
- 3 Replace the roof tiles, cutting a hole to allow the threaded rod to penetrate the roof.

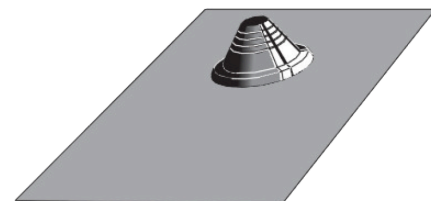


BASE SHEET CHOICE

- a) ACRYFLASH
- b) ALUMINIUM
- c) RE-INFORCED POLYMER

- 4 Ensure tiles are cleaned before installing the Flexatile to ensure the butyl adhesive strips can have maximum effect when bonded to the tiles.
- 5 Cut the rubber cone at least 15mm smaller than the top bracket's outside diameter with a sharp pair of scissors. Ensure there are no accidental nicks in the polymer, as this will continue to split/tear over time.


CUT CONE TO EXACT
CORRESPONDING
PIPE DIAMETER.
DO NOT USE A
KNIFE

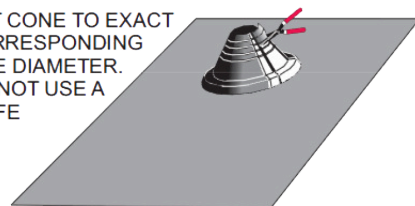

Tip: Ensure the blades are sharp with no contamination e.g. glue or any accumulated dirt.

- 6 Remove the middle lining from the underside of the Flexatile, so the bracket is given access to the rubber boot.
- 7 Lubricate the top bracket with water and slide the Flexatile down the bracket. Wind the bracket down to the desired height and lock the hex nut tightly.

LUBRICATE PIPE WITH
WATER TO SLIDE
FLASHING DOWN

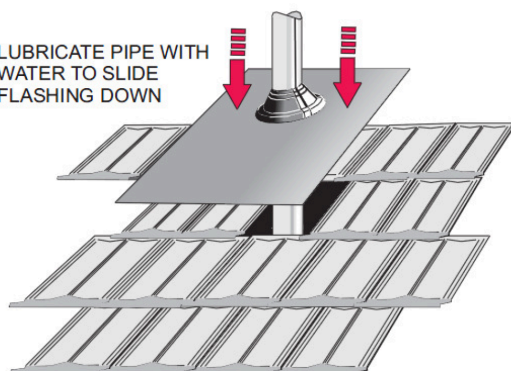

- 8 Form an anti-capillary fold at the top of the base sheet.
- 9 Remove the protective backing from the underside of the Flexatile, that is covering the butyl adhesive strips.
- 10 Hand form the base all around the tile and apply pressure to the butyl adhesive side strip.
- 11 Ensure to seal the centre hole in the top bracket prior to attaching the pergola/ carport beam.
- 12 Secure top bracket with **4x M12 hex bolts** and **50mm square washers**.

FORM AN ANTI-CAPILLARY
FOLD AT THE TOP
OF THE BASE SHEET

ENSURE ANTI CAPILLARY
FOLD IS NOT DEFORMED AT TOP

