


ENSURE TILES ARE CLEANED BEFORE INSTALLING THE AQUA TILE FLASHING TO ENSURE THE BUTYL ADHESIVE CAN HAVE MAXIMUM EFFECT WHEN BONDED TO THE TILES

CUT THE RUBBER CONE AT LEAST 15MM SMALLER THAN PIPE O.D. WITH A SHARP KNIFE OR SCISSORS

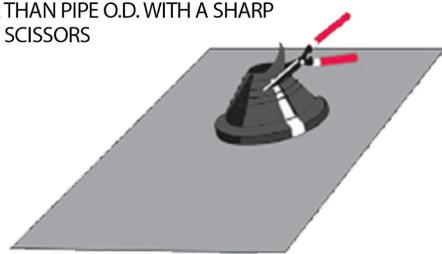


Aqua Tile

- 1 Remove roofing tiles to achieve an opening to fit the Roof Extenda Bracket.
- 2 Bolt angle bracket with the threaded rod and backing plate to the selected rafter with 4 x M12 bolts. Secure the bracket and backing plate to the top plate with 2 x M10 coach screws through the two lower bottom holes.
- 3 Replace roof tiles, cutting a hole to allow the threaded rod to penetrate the roof.
- 4 Ensure tiles are cleaned before installing the Aqua Tile flashing to ensure the butyl adhesive can have maximum effect when bonded to the tiles.
- 5 Cut the rubber cone at least 15mm smaller than the top bracket's outside diameter with a sharp knife or scissors. Ensure there are no accidental nicks in the polymer, as this will continue to split/tear over time.

Tip: Ensure the blades are sharp with no contamination e.g. glue or any accumulated dirt.


- 6 Halfway peel back the lining from the underside of the Aqua Tile, so that the bracket is given access to the rubber boot.
- 7 Lubricate bracket with water and slide the Aqua Tile onto the top bracket.
- 8 The top bracket is then wound down to the desired height and the hex nut tightened.
- 9 Form an anti-capillary fold at the top of the base sheet.
- 10 Remove the remaining protective backing from the underside of the Aqua Tile, that is covering the butyl adhesive.
- 11 Hand form the base all around the tile and apply pressure to the Aqua Tile base, so that the full butyl adhesive sticks to the tiles.
- 12 Ensure to seal the centre hole in the top bracket prior to attaching the pergola/ carport beam.
- 13 Secure top bracket with 4x M12 hex bolts and 50mm square washers.

HALFWAY PEEL BACK THE LINING FROM THE UNDERSIDE OF THE AQUA TILE, SO THAT PIPE IS GIVEN ACCESS TO THE RUBBER BOOT

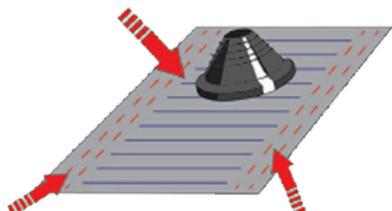

FULL BUTYL ADHESIVE ON THE UNDERSIDE OF FLASHING

LUBRICATE PIPE WITH WATER AND SLIDE THE FLASHING DOWN THE PIPE

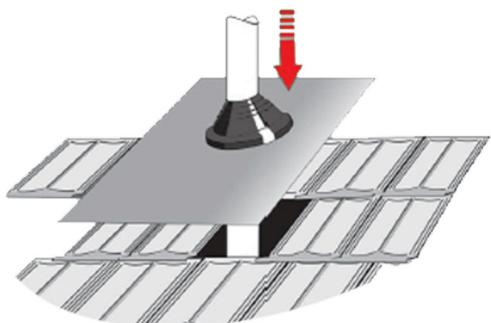

FORM AN ANTI-CAPILLARY FOLD AT TOP OF BASE SHEET

REMOVE THE REMAINING PROTECTIVE BACKING FROM THE UNDERSIDE OF THE AQUA TILE THAT IS COVERING THE BUTYL ADHESIVE

HAND FORM THE BASE ALL AROUND THE TILE AND APPLY PRESSURE TO THE AQUA TILE BASE, SO THAT THE FULL BUTYL ADHESIVE STICKS TO THE TILES